

# NetGain Motors, Inc.

800 South State Street / Suite 4 / Lockport, IL 60441 / 630-243-9100 / 630-685-4054 (FAX)

## Warp™ Motors

### Series Motor Bench Test Procedure

(Test at 12 volts ONLY)

**CAUTION! Read completely!**


**Caution!!!!**

**Sparks can ignite gases emitted from batteries!**

Use quick-connect cables for battery and motor! 

**DO NOT HARDWIRE MOTOR AND BATTERY CONNECTIONS!**

Make certain that the motor is securely strapped or bolted in position. The motor must **not** be allowed to move!

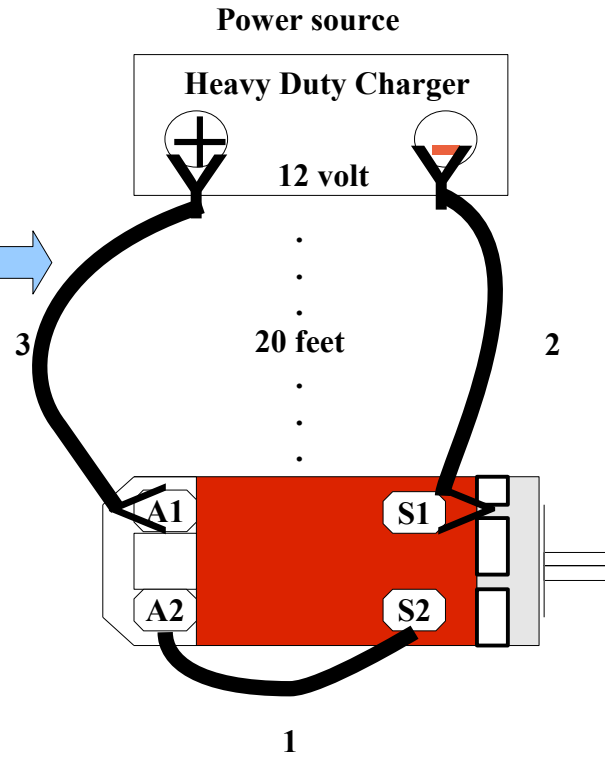

If a battery is used instead of a charger, the battery must be at least 20 feet away from the motor in a well ventilated area or preferably outside of the building!

The cables **MUST** be connected and disconnected in the order shown!

#### Connecting sequence:

1. Connect cable #1 and cable #2 first.
2. **Connect cable #3, to power source positive terminal (+) at the power source first, NOT at the motor.**
3. Connect the other end of cable #3 to terminal (A1) at the motor which is at least 20 feet away from the power source.

#### Disconnecting sequence:

1. Disconnect cable #1 first. (This deactivates the motor)
2. Disconnect cable #2 and then #3 from the power source.